


Guide for Using the Equipment in LIB 013

Room Equipment: Document Camera; VHS/DVD player; SMART Board; cabling for connecting laptop computer to SMART Board projector and to use SMART Board interactivity All equipment is connected to the SMART Board.

Location of Remote Controls: VHS/DVD - tethered to player

For computer image to be displayed, securely connect three (3) cables on top of teaching station to laptop labeled, prior to turning on equipment

1) LAPTOP Video 2) LAPTOP Audio 3) LAPTOP Network

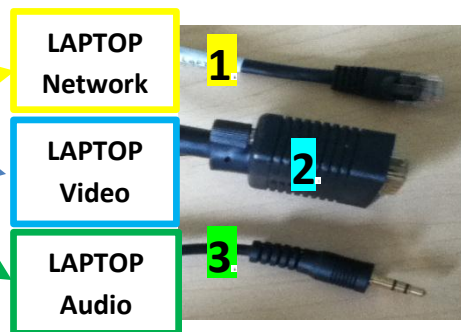


To use the **interactivity of the SMART Board**

Connect a 4th cable labeled USB LAPTOP SMART Board Control



- 1. Turn on the SMART Board** Press Power Button on the SMART Board tray. **Input must be set to VGA 2.**
- 2. Turn on your Laptop** log on, and wait as it communicates with SMART Board.
Computer image will be displayed on the SMART Board
- 3. Press POWER button on the Document Camera.** The Doc Camera controls all image displays.
Press and hold until it turns **Blue.**

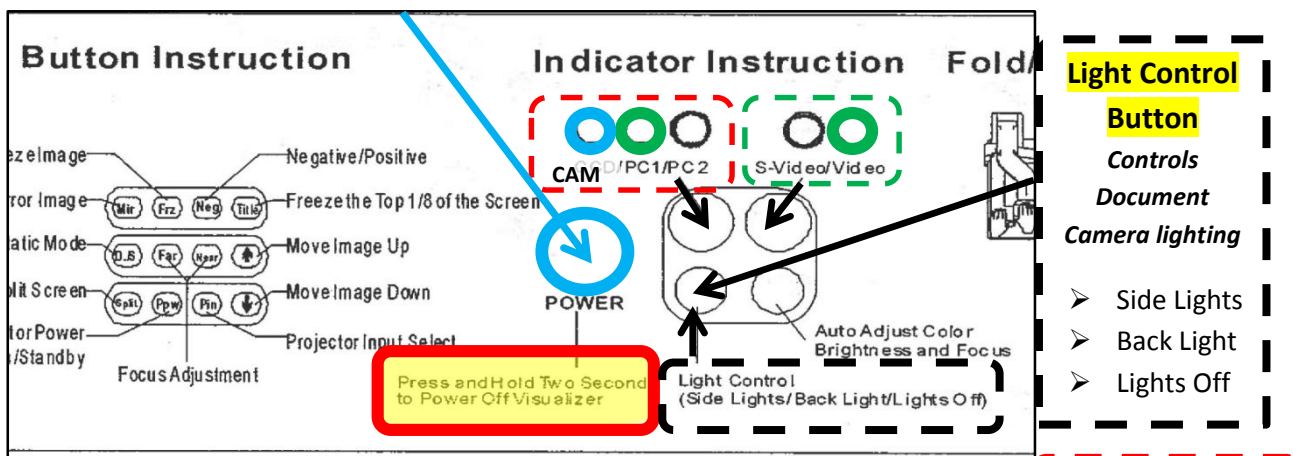


To display **Document Camera image** > Press the **button labeled** > **CAM / PC1 / PC2** displays **lighted blue circle** when selected (see graphic above)
Light Control Button will adjust lighting (see graphic above)

To display **Laptop image** > Press the **button labeled** > **CAM PC1 / PC2** displays **lighted green circle** when selected (see graphic above)

To display **VHS/DVD image** > Turn player on and load/play video.

Press the **button labeled** > **S-VIDEO / VIDEO** displays **lighted green circle** when selected (see graphic above)

Button on center, front of VHS/DVD player controls video input; select VCR or DVD
Remote for VHS/DVD is tethered alongside player

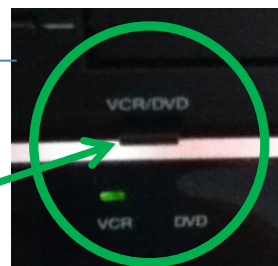

- 5. POWER OFF** 1) Doc Camera 2) SMART Board 3) VHS/DVD Player 4) Laptop & Disconnect cables.
Need assistance? Please contact Becki George, Learning Technology Coordinator, x.1268